

Main MIX out
to Master Control

Playback Audio
From SVHS Deck.

To Record Deck

From Record Deck



Mic

Tip: Start with the "GAIN" turned down. Next, set the channel's "LEVEL" and "MAIN MIX" to 70%. Then bring up the "GAIN" until the meter is peaking at 0db

Select which is sent to the headphones here. You can monitor the Record Deck by selecting TAPE.

Avoid assigning any of these to MAIN MIX.

This is the last volume control before the record deck and Master Control. Adjust all other levels first.